CROSSMAX SLR DISC 09



USE: use only on a Cross Country MTB fitted with disc brakes. Any other use (such as on a tandem, road bike, cyclocross bike, free-ride or downhill bike...) is highly inadvisable, is the sole responsibility of the user and voids the Mavic

Recommended maximum weight of the cyclist and his equipment: 85 kg.

WHEEL WEIGHTS WITHOUT QUICK-RELEASE SKEWER

690 g 830 g

WHEEL REFERENCES

Front: 996 412 10 996 413 13 Rear: 996 414 14

RIMS

REFERENCES: Front:

996 873 10

Rear: 996 873 13

Ø VALVE HOLE



Ø: 6.5 mm Length.: ≥ 32 mm



Dimensions: Ø 26'

ETRTO 559 x 17C compatible and Tubeless UST.

Recommended tire width: 1.0" to 2.1"


With the valve hole near you, the raised indicator bump must be to the **right** of the valve hole
The spoke in the first hole to the right of the valve hole is a non-braking spoke and should be inserted in the disc side


1. With the valve hole near you, the two raised indicator bumps must be to the **right** of the valve hole 2. The spoke in the first hole to the right of the valve hole should be inserted on the drive side in a marked hole on the hub

HUBS

MAINTENANCE: Clean with a dry cloth or soap and water if necessary.

Do not use a high-pressure washer.

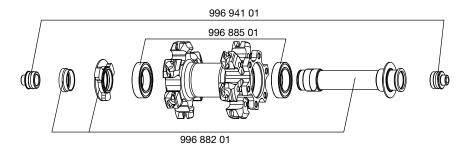

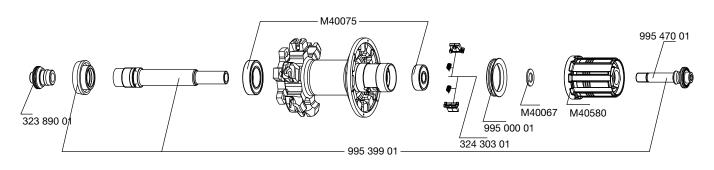

WHEEL BUILDING

REFERENCES AND

LENGTHS:

Rear drive side: Rear non-drive side: 995 376 01, length 261 mm, (per 12 + 3 red, integrated nipples) 995 377 01, length 248 mm, (per 12 + 1 red, integrated nipples)

996 874 01, length 263 mm, (per 12 + 2 red, integrated nipples)

FEATURES:

Black Zicral double butted straight pull spokes (including two decorated per wheel) with integrated, self-locking M7 aluminum

LACING PATTERN:

Front: crossed 2 on both sides

Rear: Isopulse



TENSION:

Front disc side: 120 to 140 kg Rear drive side: 120 to 140 kg

ACCESSORIES

WHEELS SUPPLIED WITH:

- BX 601 Titanium front quick-release skewer 995 388 01 BX 601 Titanium rear quick-release skewer 995 389 01
- Computer magnet M40540 (with front wheel)
- Spoke wrench M40494 (with rear wheel)
- Axle reducers 15=>9 mm 996 941 01 (with front wheel)
- UST valves 995 282 01
- Free play bearing adjustment wrench M40123 (with rear wheel)
- User guide

MAINTENANCE

Front hub assembly diameter conversion

Replacing the front axle and bearings

Replacing the rear axle

Maintaining and replacing the free wheel mechanism

Replacing the rear bearings

Replacing a spoke Replacing the front rim Replacing the rear rim

See page 25

See page 26 See 2007 TM, page 20 See 2007 TM, page 21

See 2003 TM, page 22 See 2003 TM, page 24

See page 37 See 2006 TM, page 17

To consult this information quickly in a practical manner, refer to www.tech-mavic.com